## NORMAL CHECKLIST BOEING B737-600/700/800 BOEING B737-600/700/800

## NORMAL CHECKLIST

PREFLIGHT	AFTER START
PREFLIGHT PROCEDURECOMPLETEDBLIGHT TESTCHECKEDFYAW DAMPERSETBNAVIGATION TRANSFER &DISPLAY SWTCHESNORMAL & AUTOCFUELKGS & PUMPS ONCGALLEY POWERONCEMERGENCY EXIT LIGHTSARMEDCPASSENGER SIGNSSETCWINDOW HEATONCHYDRAULICSNORMALCAIRCONDITION &C	ELECTRICALGENERATORS ONCPITOT HEATONCANTI - ICEAS REQUIREDCAIR COND & PRESSPACKS ONCISOLATION VALVEAUTOCAPUAS REQUIREDCSTART LEVERSIDLE DETENTCFLIGHT CONTROLSCHECKEDCGROUND EQUIPMENTCLEARC
PRESSPACK(S) & BLEEDS ON, SET C AUTOPILOTS DISENGAGED C FLIGHTINSTRUMENTS SET B AUTOBRAKE RTO C SPEEDBRAKE DOWN DETENT C PARKING BRAKE SET C STABILIZER TRIMM CUTOUT SWITCHES NORMAL C FIRE WARNING CHECKED F RADIO, RADAR & TRANSPONDER SET C RUDER & AILERON TRIM FREE & ZERO C <b>BEFORE START</b> PAPERS ABOARD C TAKEOFF DATA SET B FMC / CDU SET B DOORS CLOSED C FLIGHTDECK WINDOWS LOCKED B AIR CONDITION PACKS OFF C ANTICOLLISION LIGHT ON C MOBIL PHONES OFF C	SHUTDOWNFUEL PUMPSOFFCGALLEY POWERAS REQUIREDCELECTRICALONCFASTEN BELTSOFFCWINDOW HEATOFFCPITOT HEATOFFCANTI - ICEOFFCELECTRIC HYDRAULIC PUMPSOFFCAIRCONDITION &PRESSPACK(S) & BLEEDS ONCEXTERIOR LIGHTSAS REQUIREDCANTICOLLISION LIGHTOFFCAUTOBRAKEOFFCSPEEDBRAKEDOWN DETENTCFLAPSUP, NO LIGHTSCPARKING BRAKEAS REQUIREDCSTART LEVERSCUTOFFCWEATHER RADARSETBTRANSPONDERSTBYC
	~ ~ ~ SECURE ~ ~ ~
<ul><li>F First Officer</li><li>C Captain</li><li>B Both</li></ul>	IRS MODE SELECTORSOFFFEMERGENCY EXIT LIGHTSOFFFAIR CONDITION PACKSOFFFAPU / GROUND POWEROFFFBATTERYOFFF
for flightsimulation only	UNITER OF T